


DBL400/DBL425 Tap Range - Parts Diagram

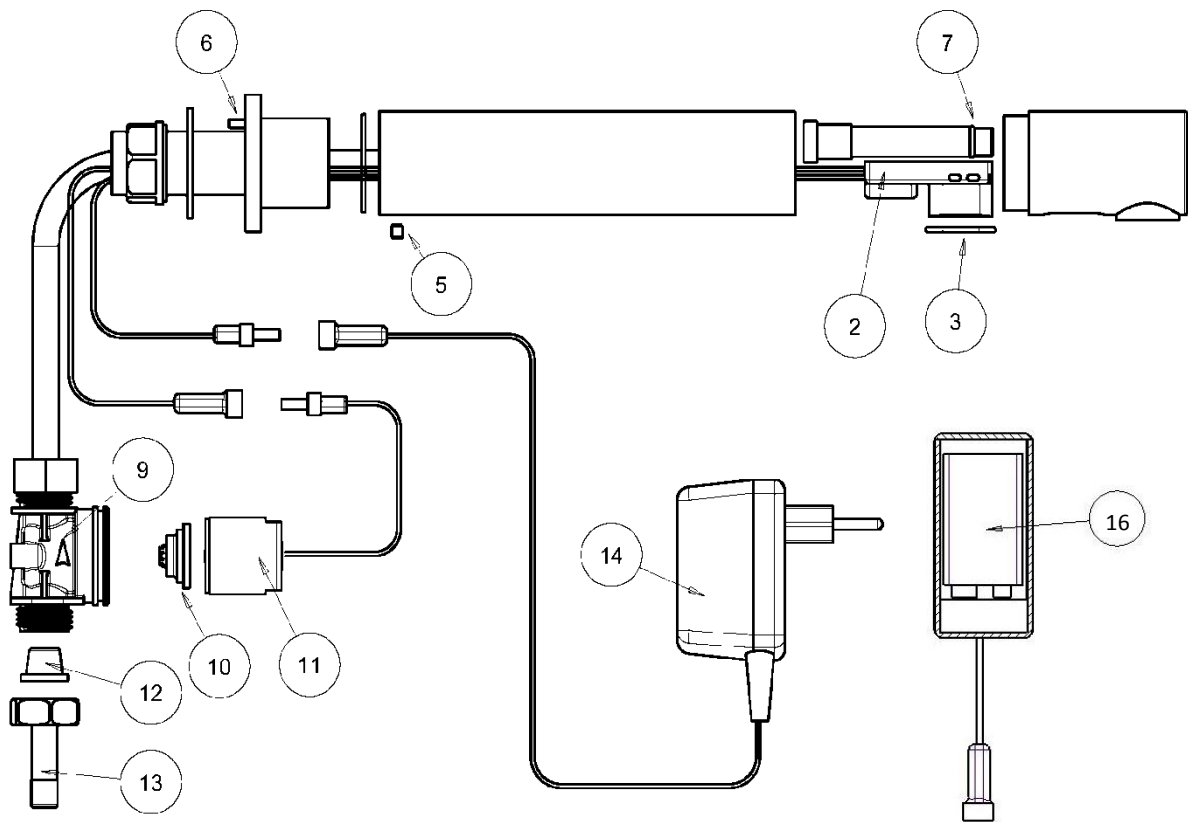

Item	Description	Part No.	Item	Description	Part No.
-	Seals and Screws Kit	DB07210015	-	Solenoid Valve Kit	DB07230017
7	O-ring		11	Solenoid valve	
3	O-ring		10	Diaphragm	
15	O-ring				
5	Screw		10	Diaphragm	DB04500001
6	Screw				
-	Solenoid BS-Housing Kit	DB07231008	16	Battery Box (IP67 version)	DB83M
9	Solenoid valve's body		16	Battery Box	DB82M
12	Filter		14	9V Transformer (100mA)	DB70M
13	Nipple		14	9V Transformer (300mA)	DB85M
-	Self-Adaptive Sensor Kit	DB07220056	-	DB425 Transformer Range	DB07220239
2	Self-Adaptive Sensor			Replacement 4 pulse SA	
3	O-ring			Sensor 08002325 c/w O-ring	
			-	DB400 Battery Range	DB07220056
				Replacement 2 pulse SA	
				Sensor 08002110 c/w O-ring	