


REVISIONS			
REV.	DESCRIPTION	DATE	APPROVED

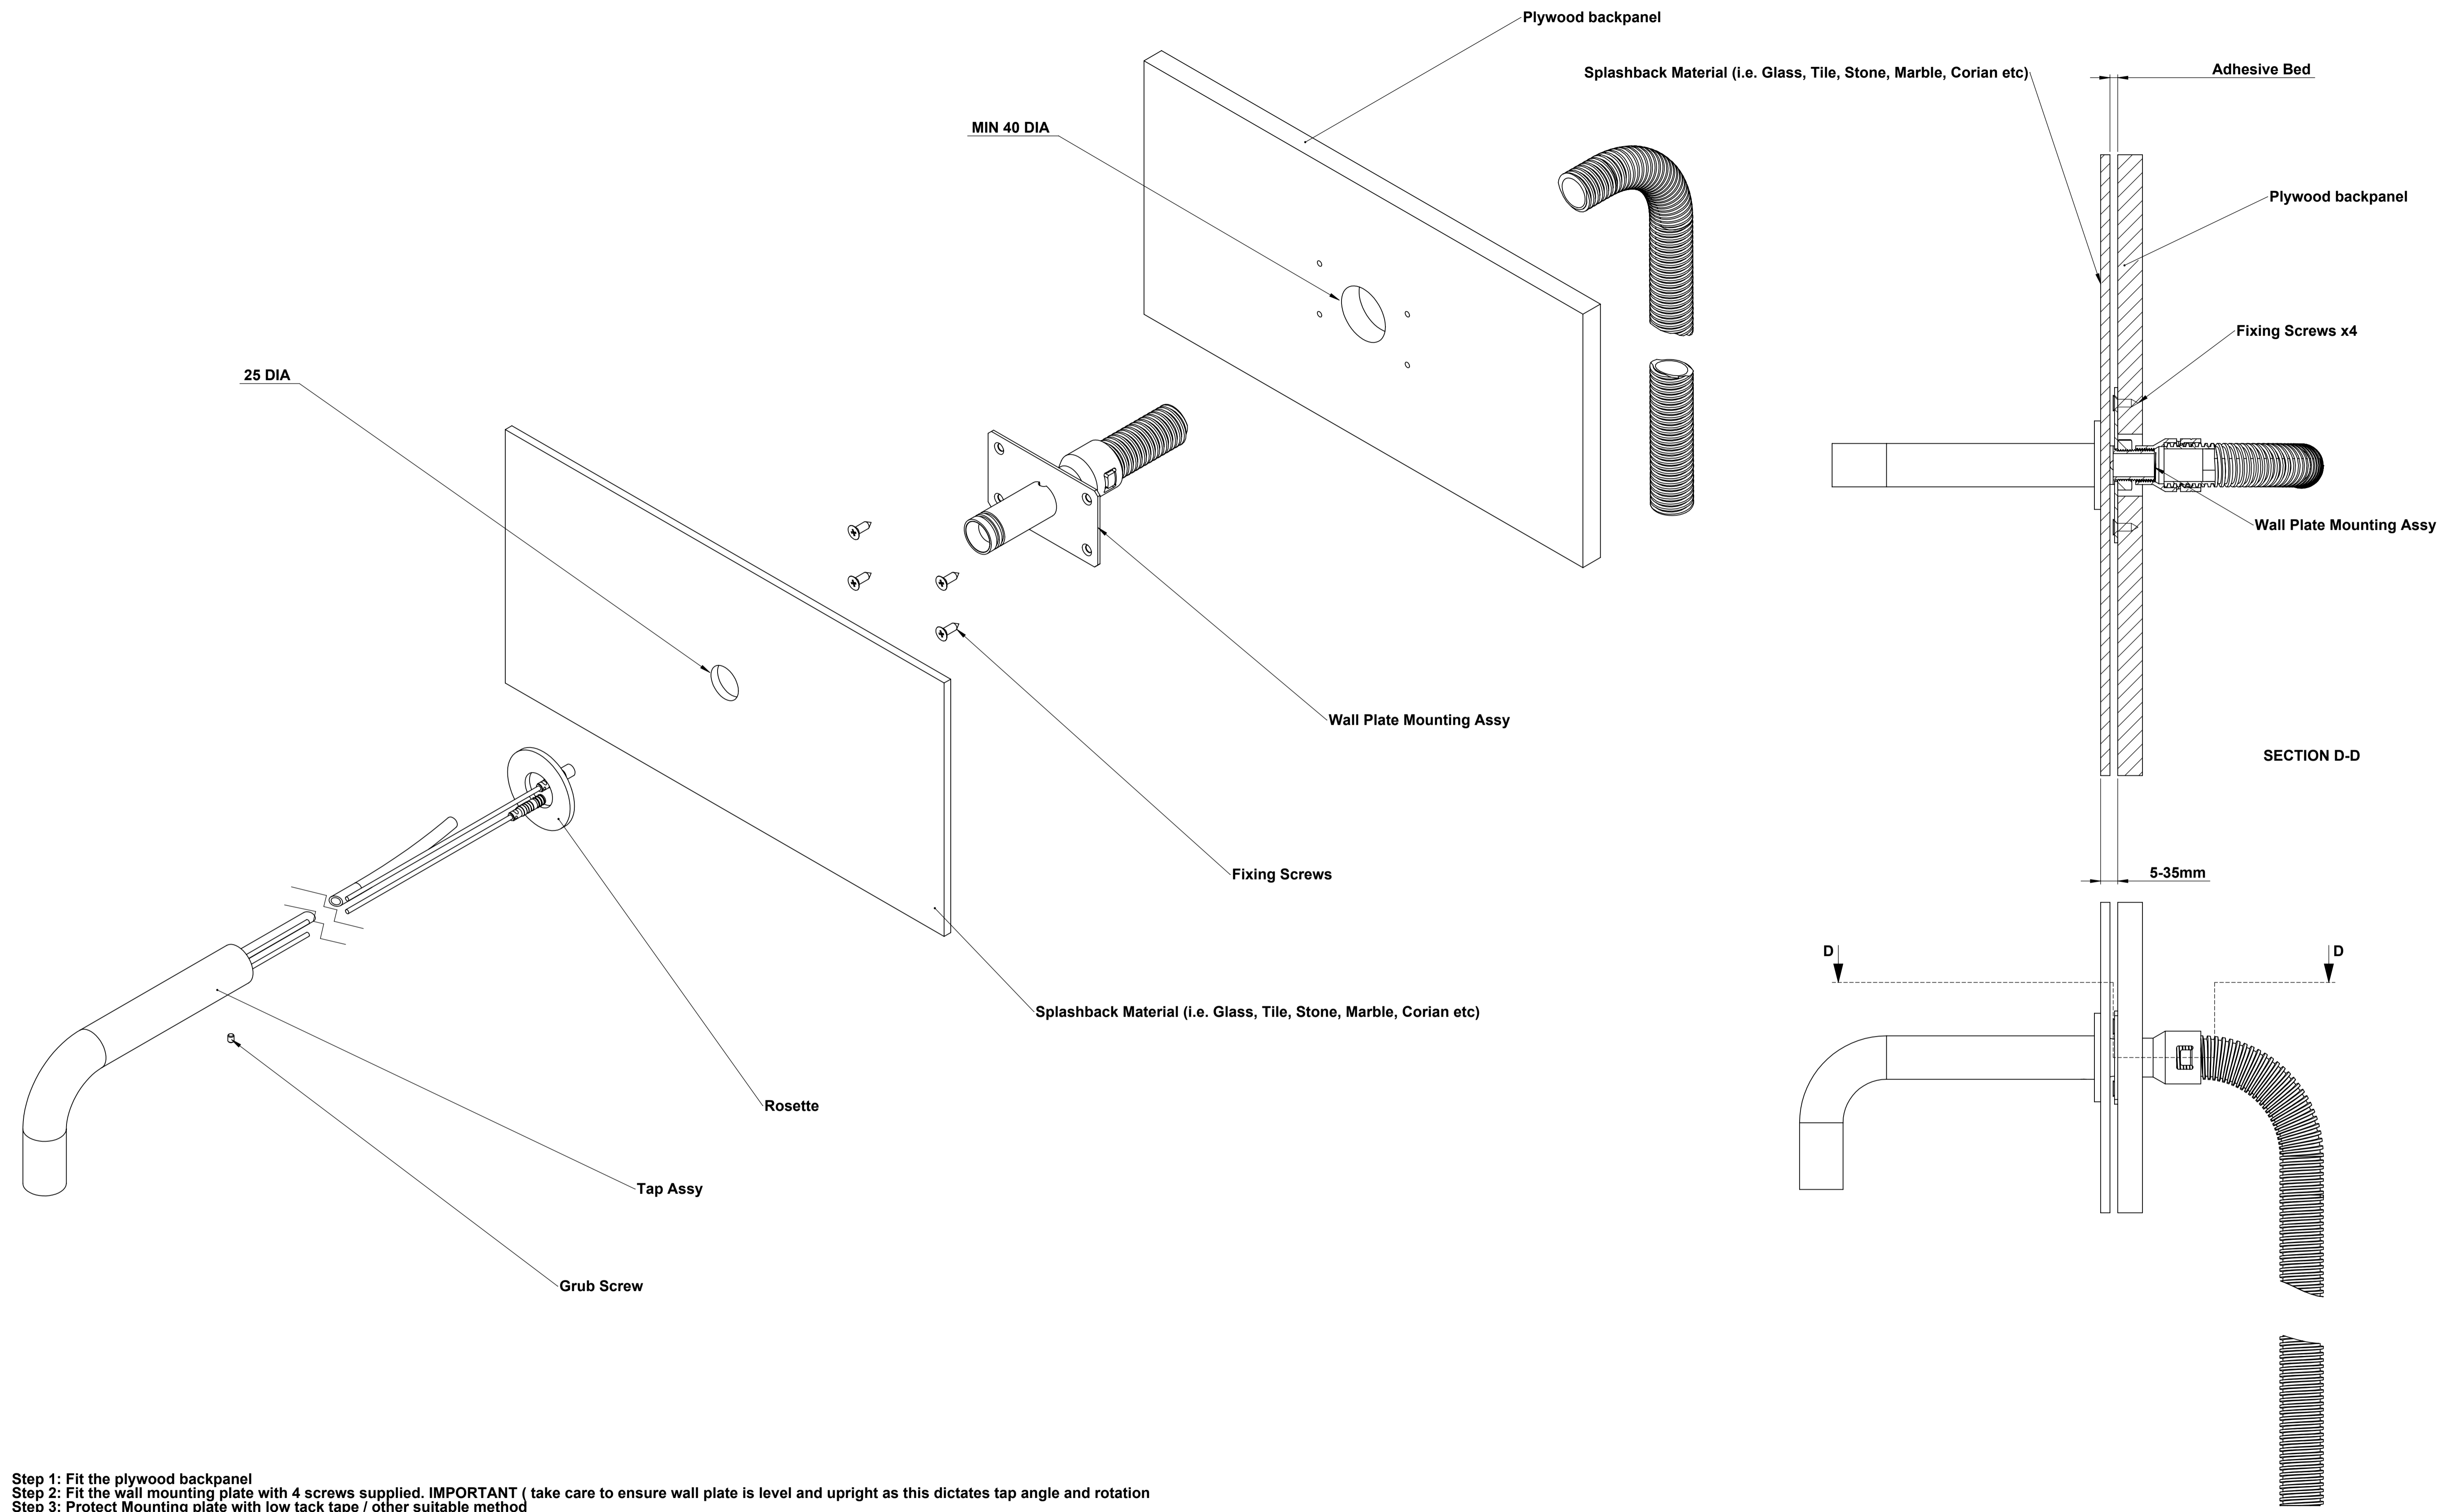

- Step 1: Fit the plywood backpanel
- Step 2: Fit the wall mounting plate with 4 screws supplied. **IMPORTANT** (take care to ensure wall plate is level and upright as this dictates tap angle and rotation)
- Step 3: Protect Mounting plate with low tack tape / other suitable method
- Step 4: Fit Glass Splashback with adhesive (or other fixing method as required) leaving mounting assembly protruding
- Step 5: Fit Rosette over mounting assembly
- Step 6: Insert plugs, cables and then pipe from the tap into mounting assy and feed through
- Step 7: Slide tap body onto mounting assy and secure with grub screw from beneath
- Step 8: Continue with power and water connections as per installation instructions

If in doubt ask!
 © Bell-Chem Products Co Ltd - This drawing may not be copied or disclosed without permission.



DWG No: Wall Mount Tap Installed		Rev: A
Title: Wall Mount Tap Installed		
Part Number: Wall Mount Tap InstalledAssembled		
Name	Date	Material:
Drawn	22/05/2018	Finish:
Checked		
Weight:		Sheet Size: A1
UNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN MILLIMETRES		Scale: 1:2 Sheet: 1 of 1
DO NOT SCALE DRAWING		